All the basins have now been analyzed. To change the parameters for any particular basin, choose Choice:6 from the menu. It will prompt you for the basin number as follows:

```
Enter the basin number that you want to analyze
Basin number: 1
[ANALYZING BASIN 1 ............]
[Please enter basin overland flow parameters now.]
Mannings roughness coefficient(0.01 - 0.8):0.1

ASSEMBLING MATRICES .........100% done.
Please enter infiltration parameters:

Saturated conductivity [m/s](0 - 8e-06):0

Capillary suction at wetting front [m](0 - 2):0

Porosity(0 - 0.9):0

Degree of saturation(0 - 1):1

Starting time step calculation ............ 100%

[Hit RETURN to view hydrograph]
```

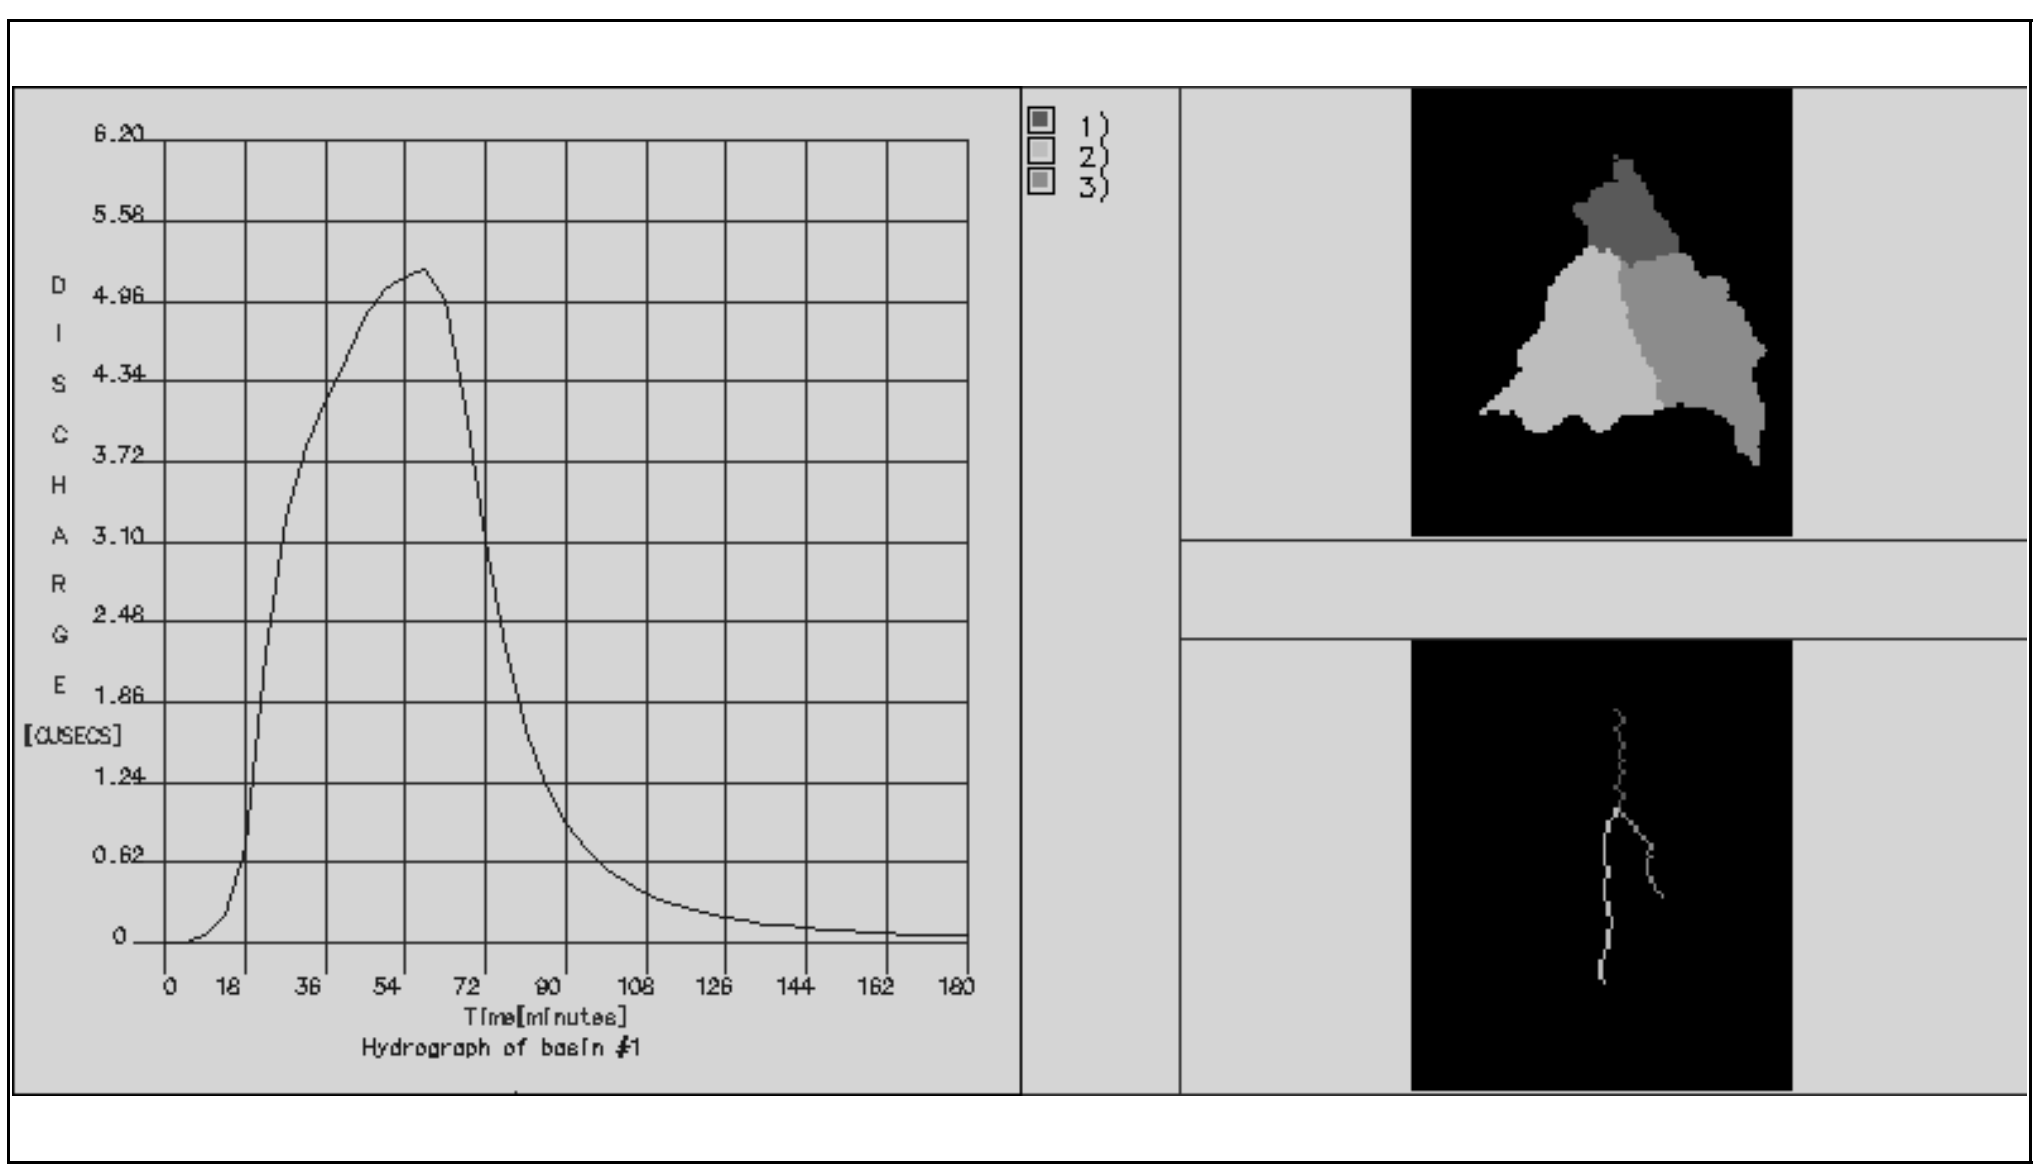

Figure 9. Hydrograph for basin 1 after changing parameters.